

# Hummingbird Elite 3D Pro

## Instruction Manual



### SPECIFICATIONS

This Super-Micro R/C helicopter has the most advanced capabilities and is considered top-of-the-line. 120 degree eCCPM control, collective main and tail rotors, torque tube tail drive and brushless motor ensure top performance.

<i>MAX MAIN ROTOR RPM</i>	3000
MOTOR:	HIMAX 4100
MAIN ROTOR DIAMETER:	520mm
LENGTH:	485mm
WEIGHT:	360-380g with electronics and battery

## Century Helicopter Products

Designed and Developed in USA

Copyright February 2005. All rights reserved.

Century Helicopter Products  
1740-C Junction Ave.  
San Jose, CA 95112  
Fax: (408) 451-1156  
Web: [www.centuryheli.com](http://www.centuryheli.com)

## Introduction

Congratulations on the purchase of Century Helicopter Product's Hummingbird Elite series helicopter. The Hummingbird Elite is not only ideal for beginners new to the hobby, but also for the intermediate to expert pilot looking for the ultimate in micro electric helicopter performance. The 3D Pro requires a 6+ channel computer radio that supports 120 degree eCCPM operation. Please check with your favorite retailer or manufacturer to verify compatibility of your radio system of choice.

### REQUIRED ITEMS

- Items needed to fly the Hummingbird
- 1x Radio (6 channels)
- 1x Receiver (6 channels)
- 4x Micro servos
- 1x Micro gyro
- 1x Brushless motor (4100 RPM/Volt)
- 1x Brushless speed controller
- 1x Battery (11.1V Li-Poly or Li-Ion)
- 1x Charger (Li-Poly or Li-Ion type)

## Warning!

**This radio controlled model is not a toy! It is a precision machine requiring proper assembly and setup to avoid accidents. It is the responsibility of the owner to operate this product in a safe manner as it can inflict serious injury. The helicopter is made pre-assembled and will require inspection for construction before your first flight. As the manufacturer, we assume no liability for the use of this product.**

### RULES OF R/C

- Always turn your transmitter on before powering the model.
  - Always turn off the model by disconnecting the helicopter battery prior to turning off the transmitter.
  - Always start the helicopter with throttle in the low position.
  - Always perform a pre-flight inspection for safe operation.
- These rules will help prevent unsafe operation.

## Table of Contents

Table of Contents & Introduction.....	2
Required Items and Building Guide for Assembly.....	2
Getting started.....	3
Connections for electronics.....	3
Testing the electronics.....	4
Servo basics.....	4
Servo/pushrod Setup.....	5
Collective Pitch Setup.....	6
Tail rotor setup.....	6
Blade Tracking, Questions and answers Section.....	7
Your first Flight.....	8
Exploded view diagram / warranty information.....	9
Replacement Parts and Options.....	10

## Attention!

If you purchased your Hummingbird Elite 3D Pro with the Lightning Brushless Motor the motor bolts will not be mounted. See below for details.

If you are using a motor other than the Lightning Brushless **DO NOT ALLOW MAIN BLADES TO EXCEED 3000 RPM.** The mounting of an aftermarket motor may be slightly different.

### HUMMINGBIRD 3D PRO MOTOR TIGHTENING PROCEDURE

Motor is not mounted on the 3D Pro. Install the motor as shown. Align the mesh between the main motor pinion and the main gear. Note the position of the pinion gear and main gear then use those locations to tighten the screws. Once tightened the motor should not move from that position.



Using the two included silver aluminum motor standoffs (pictured), align the motor for best possible gear mesh.



Using a Phillips head screwdriver fully tighten the motor bolts in place where the gear mesh is best.


# Section 1

# Your New Elite 3D Pro Helicopter Getting Started

## CHECKING OVER THE MODEL / EXTRAS

Before beginning, check the kit contents. This is a good time to check the "required items" section on page 2 and make sure everything necessary is on hand for assembly. *Brass motor connectors included only in helicopter with motor combos.*

**Important: High Performance Machine:**  
Check your model before assembling. Check all fasteners and mechanics for tightness and symmetry before flying your helicopter. Be sure to inspect the model after every flight as a safety precaution.

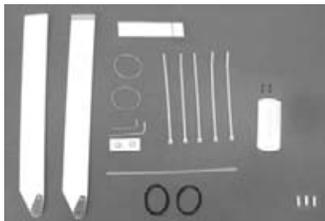


Some items that are packaged with the helicopter are not attached to the helicopter. This will include main blades and bolts, antenna tube, tools, servo tape and some fasteners including zip ties for servo wires and elastic (red) and heavy duty (black) battery fastener bands. *One bag may have two small washers and two short phillips screws. This hardware is not used on 3D PRO (used on CN1010 & CN1011 CP/FP).*

## INITIAL MECHANICAL ADJUSTMENTS

The Hummingbird 3D Pro series flybar and main blades must be set properly after removing from the package.


1. Slide the flybar until it is centered in the rotor head having equal length on each side.
2. Tighten the two set screws in the flybar control arms to secure the flybar. Flybar paddles must be parallel to each other and the ground when the swashplate is level. Make sure the screw head in each paddle faces upwards.
3. Install the main rotor blades for clockwise rotation (thick portion of blades are LEADING edge). Use a conservative amount of pressure when installing the blade bolts. The blade tension should be medium and equal on both grips.
4. Remove the canopy and set aside. You will not need the canopy until the end of the setup process.

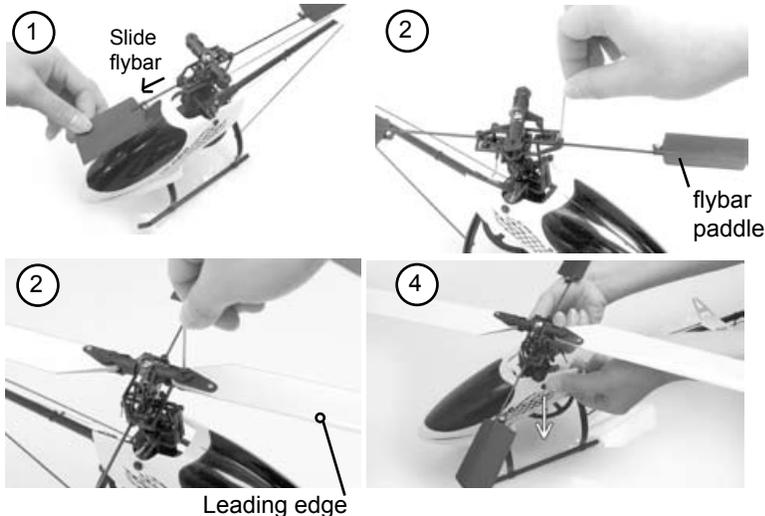

## USING ADHESIVES TO SECURE THE MODEL

Check over loose non-moving areas of the helicopter. Secure any loose connections using the adhesive of your choice. Using CA (cyanoacrylate) glue is very effective but difficult to debond for maintenance. Household white glue, although not as strong, works well and is easier to disassemble later.

**Warning!**  
Only use double sided servo tape for mounting your electronics. Glue will damage servos and electronics.

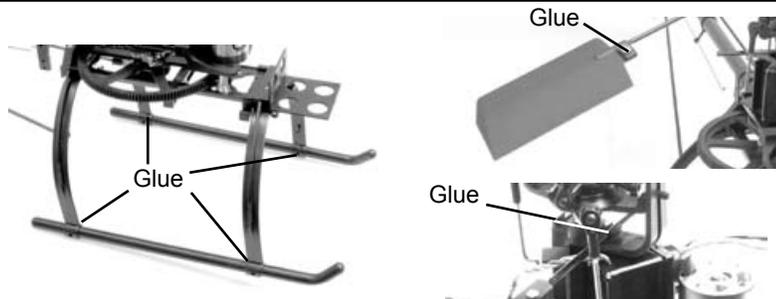


# Section 2

# Connection And Diagnostics For The Electronic Components

## ELECTRONIC CONNECTION OVERVIEW

This diagram represents the overall connections for wiring the Hummingbird Elite 3D Pro correctly (if using Futaba or Hitec). This diagram includes the separate connections pictured on the following page.

**Warning!**  
Keep electronics from becoming exposed to glue, moisture or extreme temperatures to ensure proper operation.

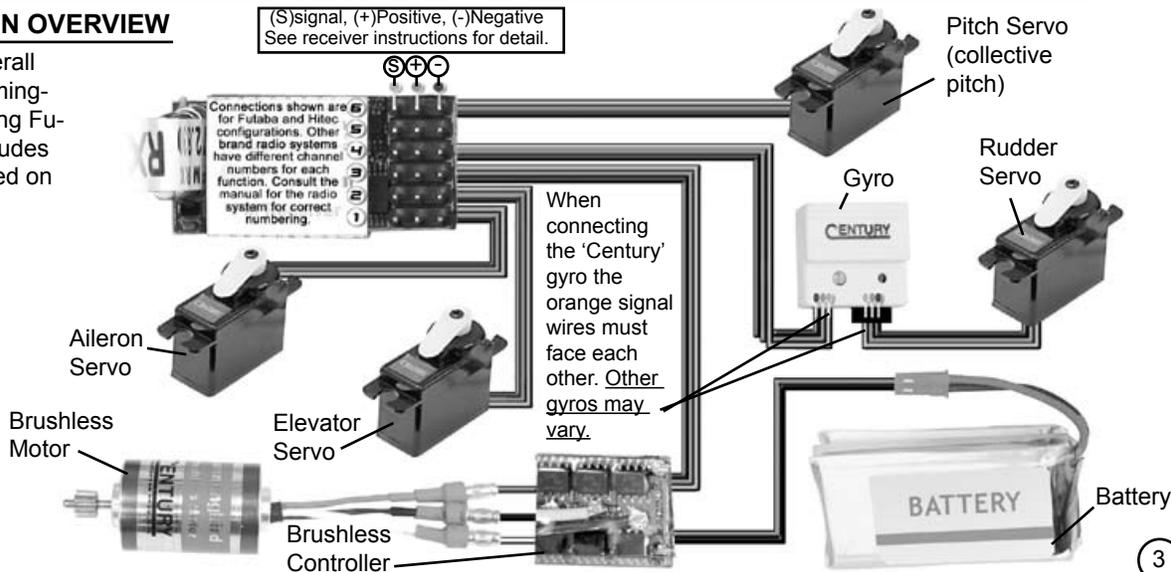


## Section 3

# Connection And Diagnostics For The Electronic Components

### Speed Control Connection



### Aileron, Elevator & Pitch Servo Connection

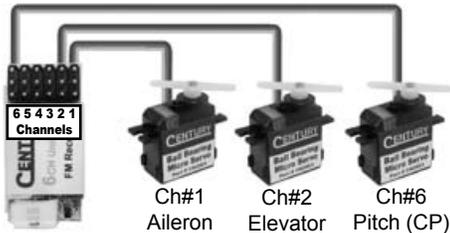

### Rudder Servo & Gyro Connections



### Motor Connection



The blades on the helicopter should spin clockwise. If the motor is turning the wrong way, switch two of the motor wires to reverse the rotation.

## TESTING AND PREPARATION OF RADIO EQUIPMENT


### IMPORTANT:

All connections shown in this manual work for Futaba & Hitec radio systems. If you have any other radio system please consult your radio instructions for channel numbering. (some equipment may differ in appearance.) Positive negative and signal pins for the receiver should be marked on the casing of the receiver or in the manual for the receiver.

### PLEASE DON'T SKIP THIS SECTION!!!!

Before modifying or installing any radio gear, please take a few minutes to test everything as shown. Time spent becoming familiar with the equipment and testing all the components can prevent difficulty.

1. Install the crystals into the transmitter and receiver. Be certain that the channel frequency matches.
2. Note that all electronics plug into the receiver with the wires as pictured (orange wire faces receiver label). Follow the diagram for each electronic connection. Once the electronics system is connected and the transmitter is turned on, follow this step-by-step process to check your equipment.

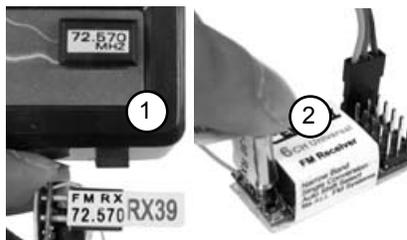

Channel numbers must match

Signal, positive & negative are connected correctly

### STEP-BY-STEP COMPONENT TEST

1. Turn on the transmitter - Is the transmitter functioning normally?
2. Plug the Battery into your Speed controller. Wait for the speed control and gyro to initialize before moving the helicopter.
3. Move the aileron, elevator pitch and rudder channels to make sure the servos work. With the gyro connected properly the rudder servo should move when turning the helicopter.



## Section 4

## Servo Basics

### AILERON, ELEVATOR AND PITCH SERVOS - (**DO NOT MODIFY THE RUDDER SERVO**)

#### TEST EVERYTHING FIRST!


- 1 & 2. Trim both servo mounting flanges from each servo.
3. Before installing you will need to remove the pushrods from the swashplate of the helicopter. Keep the pushrods on the side until you install the correct servo arms (next subsection).

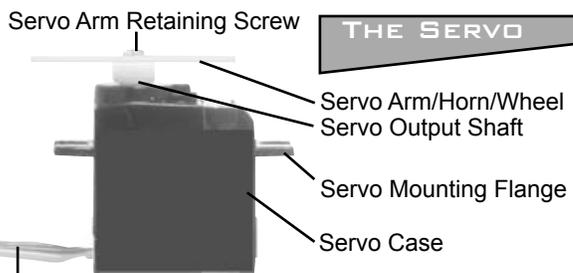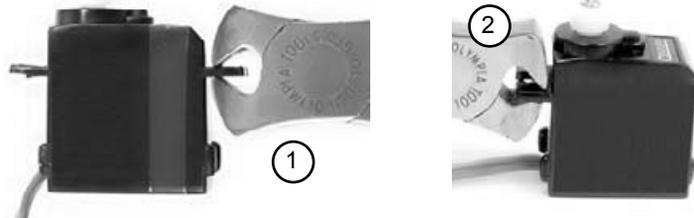

THE SERVO


Servo Lead w/Connector

**IMPORTANT: Do not modify the rudder servo**

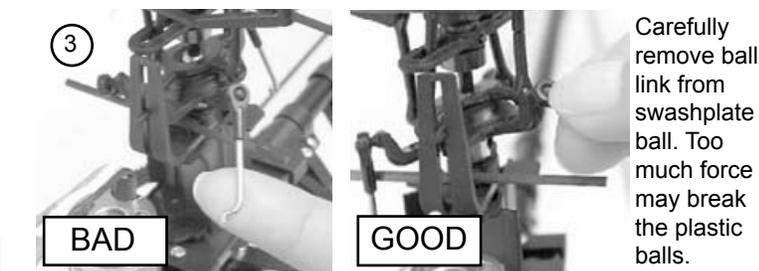

### SERVO ARMS AND HORNS FOR THE 3D PRO

1. A long half arm may have to be created by cutting a full or cross arm.
2. After testing the radio equipment the servos will be in their center position. Remove the servo retaining screw and servo wheel. Replace the wheel with one of the long half arms. See section 3 for the final positions for your version.
3. Some servo arms require widening the hole in the arm in order for them to accept the Hummingbird's pushrods using a #55 drill bit [1.34mm or 0.052"].





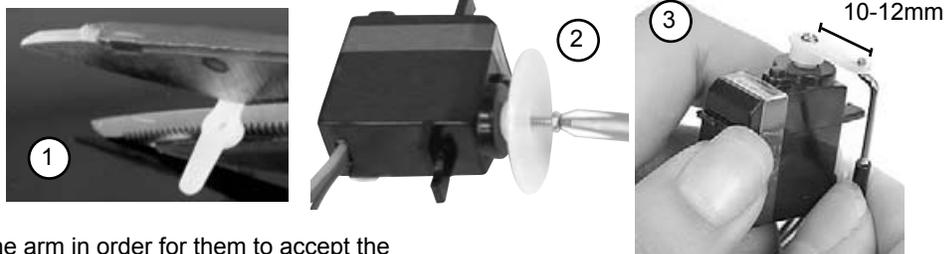


**MOUNTING YOUR SERVOS (USE SECTION 4 FOR DETAILS)**

1. Insert the pushrod into the hole on the servo arm farthest from the output (10-12mm from center).

2. Place servo tape on the mounting surface before mounting the servo.

3. Note that the elevator servo is mounted slightly forward (3mm or so). This will ensure that the arm can move freely (avoiding contact with the frame).

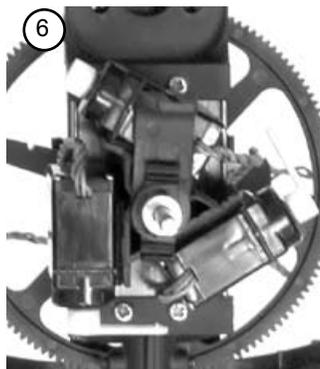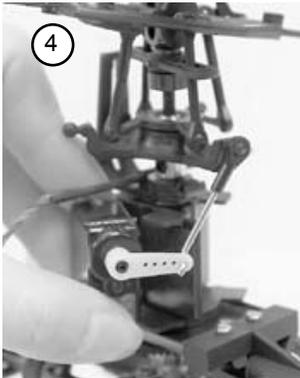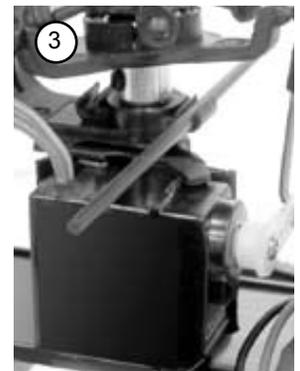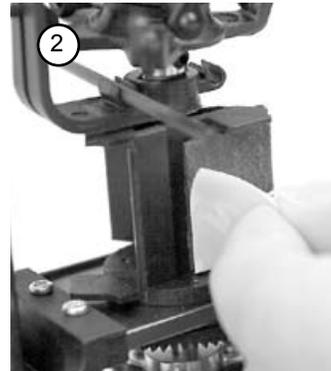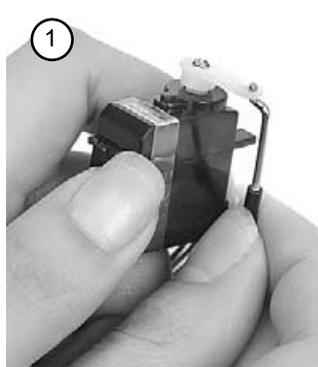

4. If the servo has a label on the same side that will mount with servo tape, peel off the label and clean the surface using rubbing alcohol. Once the mounting position of the servo is determined carefully mount the servo to the mast tower.



5. After mounting the servo. Place the plastic ball link on the corresponding control ball on the swashplate. Only use the large end of the tapered opening on the ball link.

6. There are 3 servos needed on the 3D Pro. When mounted they should appear as pictured.


7. Turn the radio on with all sticks and trims centered. Verify also that paddles, swashplate & servo horns are parallel to each other and also 90 degrees to the main shaft when all sticks are centered.

Adjust the lengths of the pushrods by twisting the ball links clockwise to shorten. Twist counter-clockwise to increase the rod length.

8.) The Elite 3D Pro helicopter uses the 120 degree eCCPM control system. This system will require a computer helicopter radio that supports 120 degree eCCPM. Refer to Page 6 for detailed instructions on how to use eCCPM.

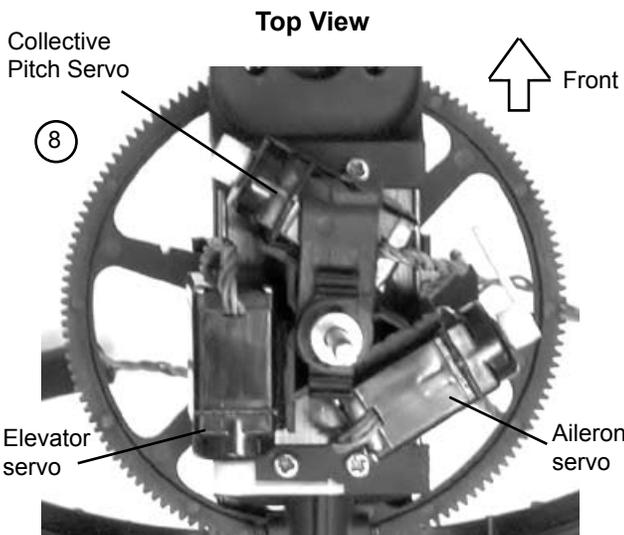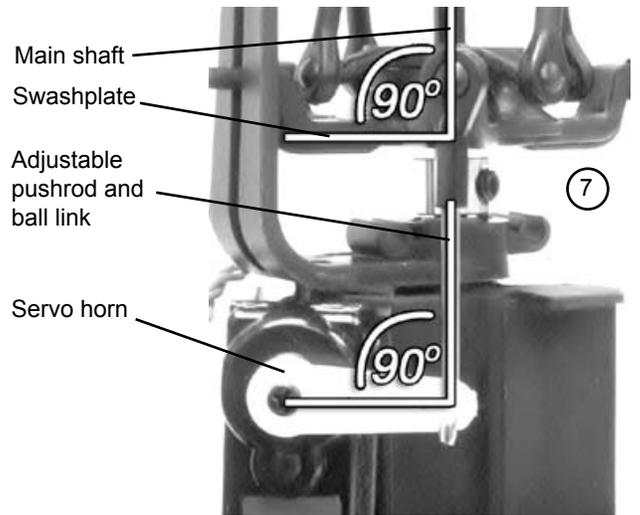

**IMPORTANT:**  
Refer to Page 6 for detailed instructions on how to use the eCCPM control system.

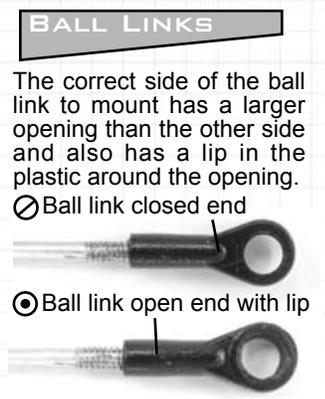

## Section 6

## eCCPM Radio Setup

### Expert Tips:


To make the setup go easier on transmitters with 5 or more programmable points on the pitch curve, assuming that the 5 points correspond to low stick, point 1, point 2, point 3 and high stick. Set points 1,2,3 to 50% which will create a flat pitch curve in the center that will allow you to consistently find 50% pitch near mid stick. After servo direction and centering is completed, return points 1 & 3 back to their default values. For highly aerobatic flying, when the rotor head speed is at 1500rpm or above, bond the flybar paddles in place using cyanoacrylate glue to the flybar.

### Radio Setup Procedure

1. It is best to choose a new model memory (if available) and use the Reset feature to remove any previous settings or mixes. Remember this usually also returns the radio configuration to single servo.
2. Locate and activate the swashplate mixing for 120° ccpm (most manufacturers set single servo on channel 6 by default).
3. Return both the aileron and elevator trims and subtrims to center along with any hover pitch knobs.

### Collective Pitch Setup:


4. Power on the transmitter and the helicopter without the motor connected. Power on the model. Center throttle/collective stick to 50% and find the correct servo arm that is closest to 90° degrees (slightly up or down is ok).
5. Watch as the collective stick is moved that all three servo arms move in the same direction. Any servo that is moving in the wrong direction should be corrected using the servo reverse function for that channel. Continue until all three servos work together to move the swashplate in the same direction.
6. Watch as the collective stick is raised that the swashplate moves upwards. If it moves downwards, go to the ccpm swashplate menu and change the default setting to be opposite, for example, if Pitch is set to +60 then change to -60 and retest.
7. While looking from the back of the helicopter, check that when the elevator stick is moved forward that the swashplate tips forward and when the aileron stick is moved left the swashplate tips left. If the swashplate moves in the wrong direction, change the direction from the same ccpm swashplate menu. Change from the default value of +60 to -60 and retest.
8. Now that the servos are moving in the correct directions, the servo horn center position must be trimmed using the internal subtrim feature to position the arm be about 90 degrees to its pushrod (and to the length of the servo), use the subtrim (or centering feature) to achieve this angle, be as precise as possible.
9. Carefully remove the three pushrods from the swashplate and verify the length is 25mm from the “z” bend to the center of the ball link. Remove each servo horn one at a time and drill the last hole (photo) using a #55 drill bit [1.34mm or 0.052”] that locates the pushrod at 11-12mm from the center of the servo arm pivot point.
10. Now that the basic radio setup procedure is completed, return to your pitch curve function and restore points 1 & 3 to their default values, usually 25% and 75%. Move the collective stick from low to high and watch the swashplate, if the swashplate bends at the low or high position, reduce the pitch value in the ccpm menu, for example if the value is -60 try -55 and repeat the test. Continue until the swashplate moves to the limits.
11. Move the cyclic (aileron and elevator) sticks to the full horizontal and diagonal positions and see if the swashplate is binding against the main shaft. If it does, return to the ccpm menu and reduce the value for the servo that is binding. While holding the cyclic stick in the corner, slowly rotate the rotor head and again watch the swashplate for binding.

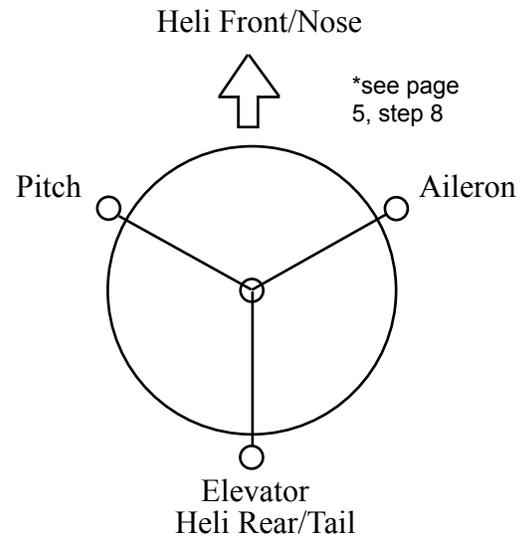


## Section 7

## Tail Setup: Tail Pushrod, Servo And Blade Grips

When the main shaft turns clockwise the tail rotor should also turn. If the tail does not turn or if it seems to skip, check the gears inside the tail boom and gearbox. Right rudder input should turn the nose to the right. Left rudder input should turn the nose to the left. The servo controlling the rudder is mounted on the tail boom just aft of the main mechanics. The Rudder servo mount clamps to the tail boom and holds the servo in place with two screws. Make sure the grip of the clamp is secure so the mount cannot shift in any direction.

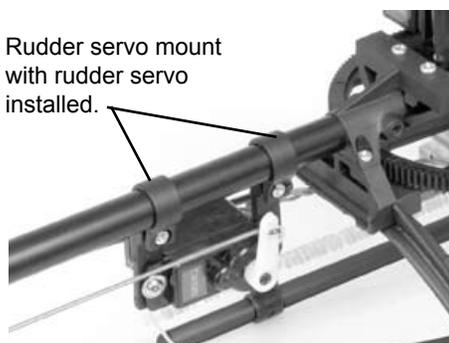

The servo arm should be positioned for maximum travel range. setting the servo arm at a 90 degree angle to the tail boom will give equal (maximum total) travel distance on both ends of the servo travel range.

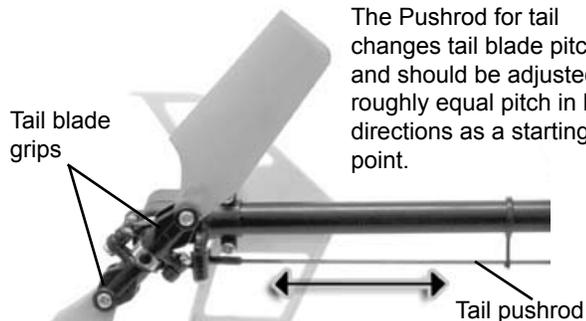

The only way to get perfect tail control is to test your settings and adjust until the helicopter responds equally for both directions of rudder control. Keep in mind that the tail is compensating for main rotor torque. Note: main rotor torque turns the helicopter counter-clockwise.


The Pushrod for tail changes tail blade pitch and should be adjusted for roughly equal pitch in both directions as a starting point.



Place a tiny bit of oil (any good lubricant for metal on metal) on the tail output shaft. This will keep the tail pitch slider sliding smoothly on the output shaft.

## ROUTING THE ANTENNA

 To provide the best possible reception for the model, the Hummingbird Elite comes with a plastic tube for routing the antenna. Put a small hole in one end and pull the antenna all the way through leaving about 2 to 3 inches of slack. Wrap the antenna around the tube. After the antenna is almost completely wrapped around the plastic tube place a hole at the other end of the tube to secure the end of the antenna. The Hummingbird Elite series helicopters have brackets in the landing gear for mounting this plastic tube.




## MOUNTING THE BATTERY

The 3D pro is provided with 2 battery mounting standoffs. Place the battery against the standoffs to test alignment and reinforce the battery with a small amount of double sided tape or industrial strength velcro so the battery does not shift.

The battery holders slide back and forth on the lower frame so you can adjust the center of gravity on the helicopter.

To test your results hold the helicopter by the flybar (flybar should be 90 degrees from tailboom). Move the battery to have the helicopter sit level or very slightly nose heavy.

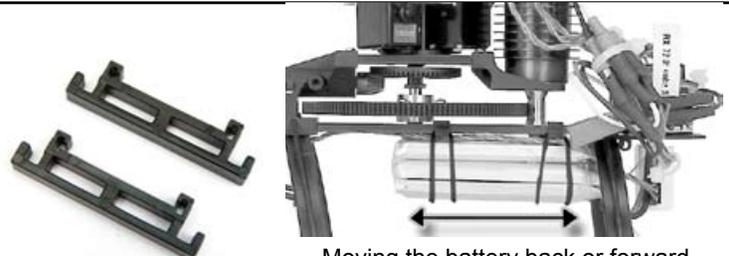

Moving the battery back or forward will help adjust center of gravity

## ADJUSTING THE BLADE TRACKING

### Tracking Adjustment

1. Tracking refers to trimming the actual pitch of the main rotor blades to be equal. On the first flight, bring the rotor head up to speed without leaving the ground and look at the side or profile of the rotor disk (FROM A VERY SAFE DISTANCE, MAKING SURE TO WEAR EYE PROTECTION).

2. Only one rotor blade should be visible, if there are two distinctive blades then the tracking linkage must be changed. Observe which blade is tracking above the other by marking one first. Carefully remove the ball link on that blade grip and shorten the link by one complete turn.



## TROUBLESHOOTING QUESTIONS AND ANSWERS

### Q: Everything is on and connected. Why won't the rotors turn?

A: -The throttle may not be set in the transmitter or a connection may be loose or disconnected.  
 -Be sure to follow the guidelines given for the speed controller. Your transmitter or speed controller programming may have to be adjusted for use with an R/C helicopter.

### Q: Why does the helicopter spin like a top?

A: -It's possible that the rudder channel on your radio is reversed or your gyro is installed improperly.  
 -You may simply need to adjust a few settings in the transmitter for additional sensitivity.  
 -Check the connections to the receiver to make sure connections are correct. If the problem persists take a look at the direction the rudder servo moves when the gyro is activated in relation to the tail rotor pitch.  
 -Check the pitch control linkage on the tail rotor from endpoint to endpoint making sure the blades have enough pitch and pitch enough in each direction.

### Q: Why is there vibration?

A: -The main blades may be out of track. Refer to the blade tracking information above.  
 -The main shaft may be bent. This can be difficult to notice when the blades are not moving. A bent main shaft can be caused in a crash or a hard blade strike.  
 -Vibration can also result from any loosely connected components such as the battery tray or the landing gear. Make sure to secure them and be sure to check the frame and flybar every time you crash or have a hard landing as they may need to be repositioned.

### Q: Why won't the helicopter come off the ground?

A: -Be sure that the gear mesh on the main motor moves smoothly and that the battery is fully charged.  
 -If you don't think it's the battery it's possible that slightly damaged blades are reducing the possible lift. If there is a part of the blade broken off especially near the tip the helicopter may not lift properly.  
 -Check to make sure nothing is rubbing against the main gear possibly slowing its RPM.  
 -Observe the travel of the collective. Based on varying climates and altitude conditions your endpoint positions may need to be modified to give it additional pitch. OR:  
 -You may have too much pitch. Too much pitch will lower your head speed to a point too low to lift the helicopter. Use the throttle and pitch curve settings in your transmitter to find the best rotor head speed and pitch for at least 3 points on the pitch/throttle.

### Q: Why is it so difficult to move the helicopter backwards (or any direction)?

A: -Check all servo movement when the helicopter is in motion and stationary. You are looking for any control input that causes the servo or pushrod in that area to get caught or bind. After discovering any bind eliminate it by adjusting servo travel or pushrod length. (it is unnecessary to increase the length of any pushrod or the travel on any servo to a point that may cause binding.)

### Q: Why does the helicopter operate on its own without my command inputs?

A: -You may be getting hit with interference. RF interference can occur for many reasons. Ordinary household electronics, televisions, cell phones, microwaves, electric tools and other R/C models can add to the field of interference affecting your model. Try turning off unnecessary electronics or find an area where there are less electrical disturbances.

### Q: Why does the helicopter still move too far forward or backward even after adjusting the servo arm positions and trims?

A: -The helicopter may not have an even center of gravity. You can slide the battery in it's mounting tray to adjust it's center of gravity.  
 -You can also combine your battery weight centering with trims and servo arm positions to get any desired combination.  
 -Mount the electronics in the front of the helicopter to avoid being tail heavy. Having the helicopter slightly nose heavy helps improve forward flight on a helicopter (R/C or otherwise).

## BASIC HOVERING

## Hovering

When all is set, ready and checked, it's time for the initial flight. Try setting aside a 5 foot diameter circle as a takeoff and landing pad. Keeping the helicopter inside the landing area will help improve your training.

1. Turn the transmitter on first! Turn helicopter on (plugging in the battery) and stand behind the model about 10 feet away.
2. Always watch the nose of the helicopter, move the rudder left and the nose will move left.
3. Start by increasing the throttle slowly until the helicopter rises 1 foot off the ground then set it back down.
4. Repeat this process until you become comfortable with holding the model in the same spot for a few seconds then land it.

After some time at this you can increase the height slightly up to 2-5 ft. (be very careful not to fly too high) as you are practising taking off and landing. This is the most basic but required skill for the beginner to learn. Above 2 feet training gear become ineffective.

## The many types of hovering

It cannot be stressed enough that mastering the hovering skill is crucial to becoming a good helicopter pilot. As you progress in your learning, always practise hovering until you are completely comfortable in holding the helicopter in any direction at any altitude.

1. Pilot view - helicopter facing away from you
2. Sideways - Looking at either side of the helicopter left and right
3. Nose in - nose pointing at you

Perfecting hovering enables you to learn all the types and styles of helicopter flying, forward flight, loops and rolls, 3D (aerobatic flying) and anything you want to do with your helicopter as it can be set up for beginner through to expert. Lastly, have fun!

## PRE-FLIGHT CHECKLIST

1. After turning the radio on, move each servo separately looking for unusual or excessive movement.
2. Inspect the main and tail rotor blades for damage. Never fly damaged blades.
3. Inspect the main and tail rotor linkage for play or binding.
4. Turn the main gear in both directions to feel if a problem is developing.
5. Check the electronics connections making sure everything is correct.

## TRIM AND THROTTLE ADJUSTMENTS

**Control Movement** - All trimming of the Hummingbird should be done one click or detent of the subtrims at a time until it will rise without moving left, right, forward or backward at a location without wind. Some tail rotation is normal at lift off until it is hovering. Start by lifting the Hummingbird 3-6 inches at a time to practice lift off and landing.


All trim adjustments are to allow you to lift the helicopter straight up and can be made one click or detent at a time on the radio.


(1) **Collective & Throttle:** Slowly raise the throttle stick, the helicopter should lift off at half stick. If it tends not to lift off increase the hover pitch on the radio or increase the throttle trim. If the helicopter lifts off before mid stick decrease these settings. (collective present in CP model only.)

(2) **Rudder:** When the helicopter is ready to take off, make a correction trim first then use the rudder stick to control the Left & Right. Note, now is a good time to make a final adjustment on the gyro.

(3) **Elevator:** If at hover the helicopter tends to move forward, move the trim down, if it moves backward move the trim upwards. Use the elevator stick to control the Forward & Backward.

(4) **Roll (Aileron):** If at hover the helicopter tends to move left, move the trim right, if the helicopter moves to the right move the trim left. Move the Aileron stick to control the slide of the helicopter to the Right & Left.

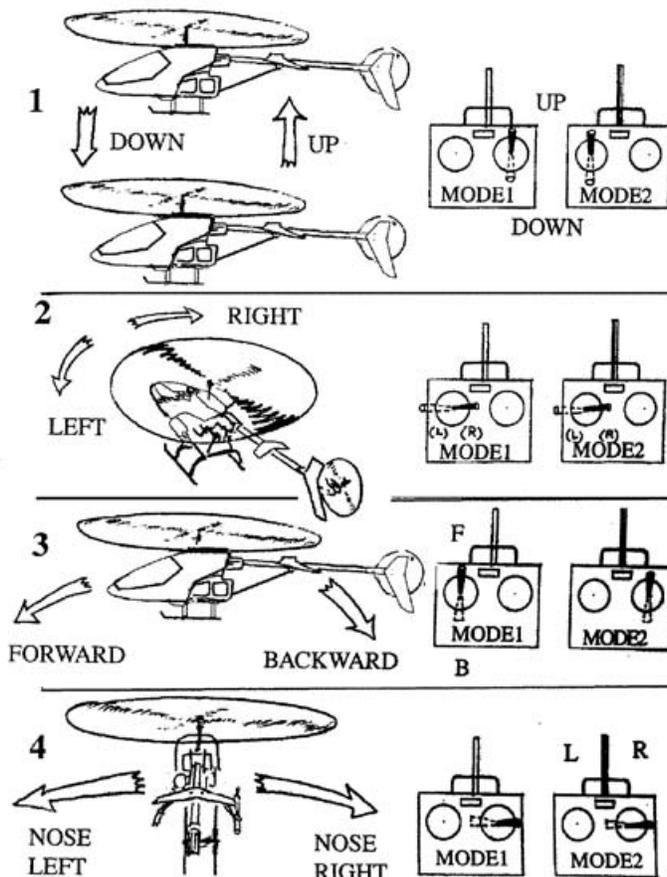

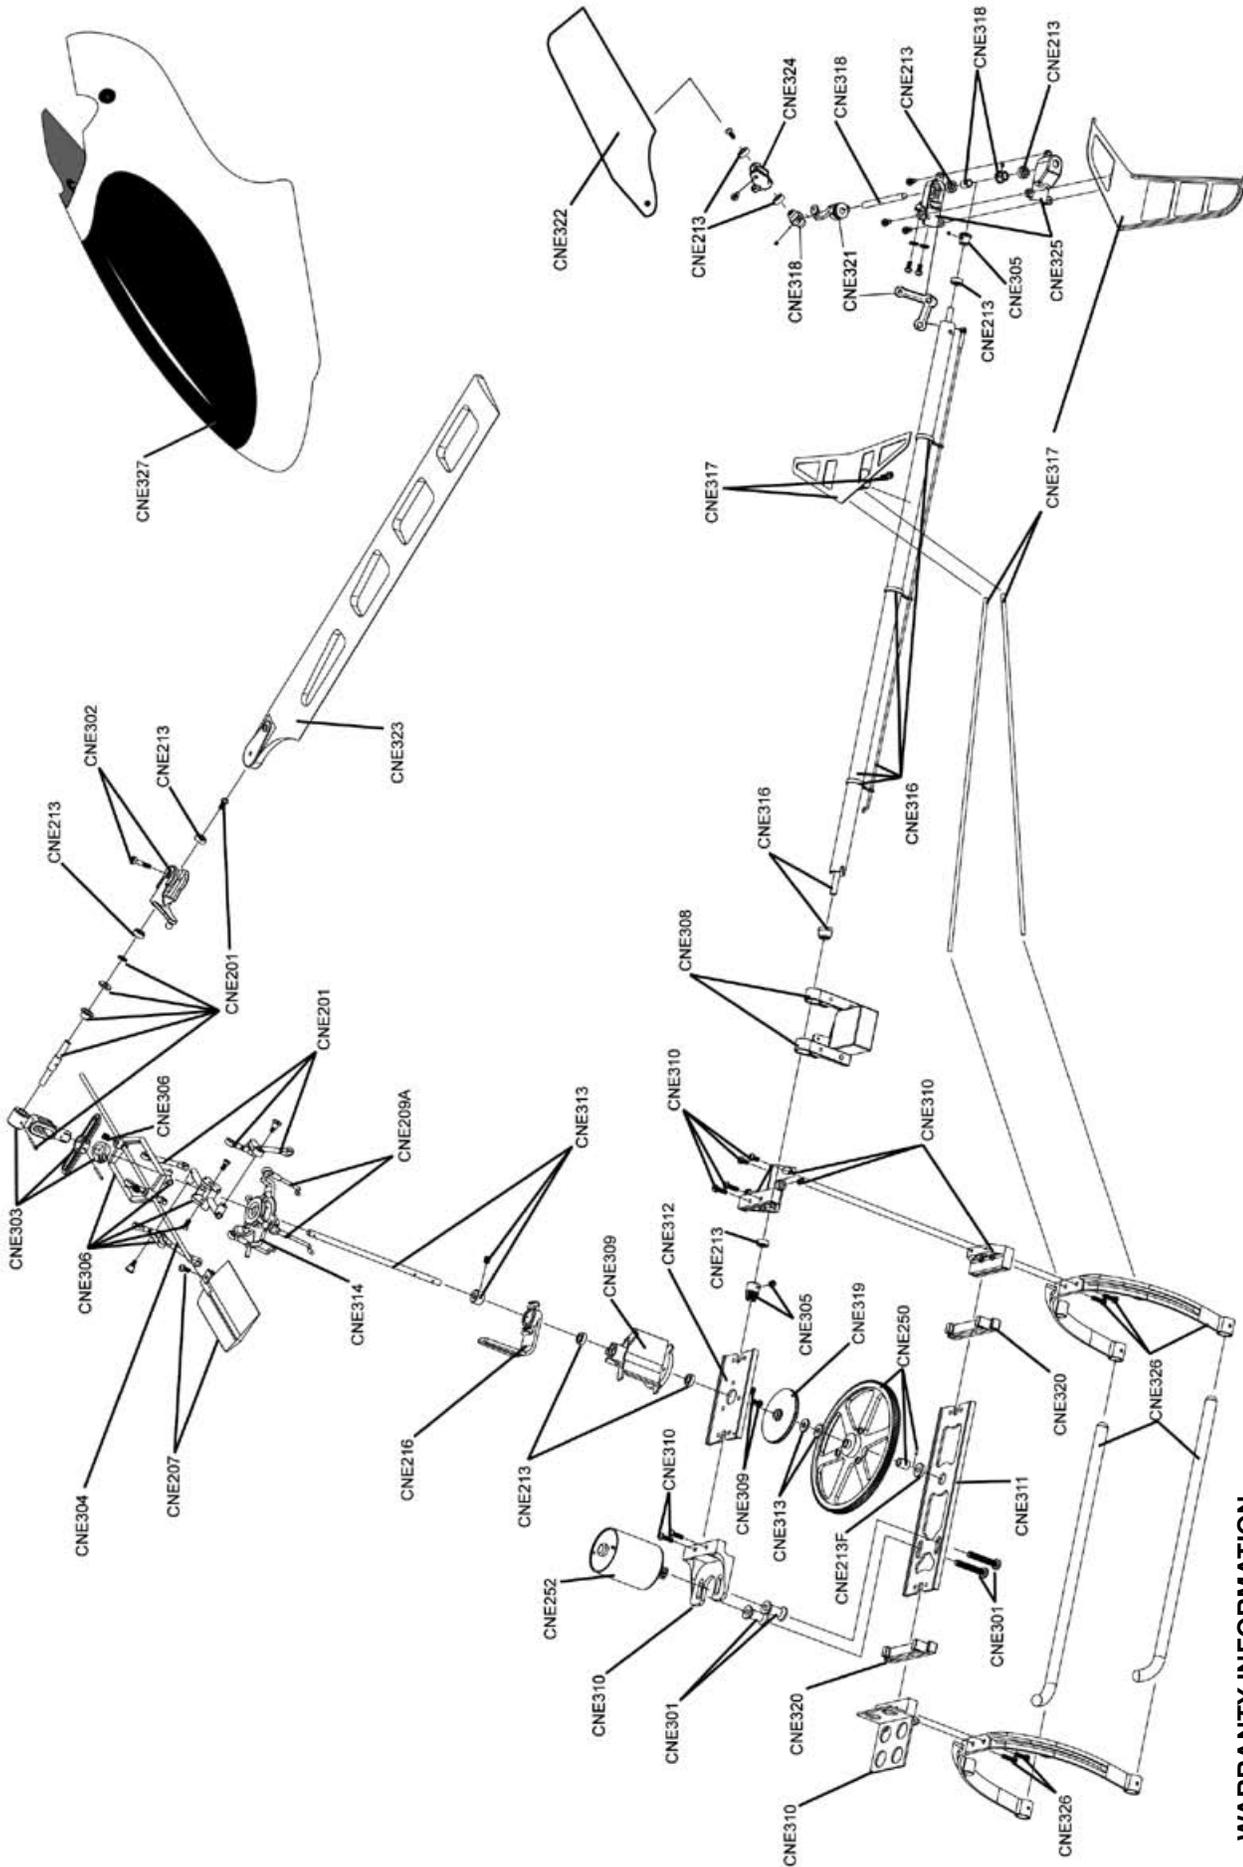

**WARRANTY INFORMATION**

Your new equipment is warranted to the original purchaser against manufacturer defects in material and workmanship for 30 days from the date of purchase. During this period, Century Helicopter Products will repair or replace, at our discretion, any component that is found to be factory defective at no cost to the purchaser. This warranty is limited to the original purchaser and is not transferable. This warranty does not apply to any unit which has been improperly installed, mishandled, abused, or damaged in a crash, or to any unit which has been repaired or altered by any unauthorized agencies. Under no circumstances will the buyer be entitled to consequential or incidental damages. This limited warranty gives you specific legal rights. You also have other rights which may vary from state to state.



**CNE201**  
Head Axle & Dampeners



**CNE207**  
Flybar Paddles



**CNE216**  
Antirotaion Bracket



**CNE250**  
Auto Rotation Hub & Gear



**CNE213**  
Main Shaft Bearings  
(3x6mm -2pc-)



**CNE209A**  
Swashplate Links



**CNE213F**  
Bottom Plate Flanged  
Bearing (Flanged  
3x6mm -1pc-)



**CNE301**  
Motor Mount



**CNE302**  
3D Pro Main Blade Grips



**CNE303**  
CNC Rotor Hub & Collar



**CNE304**  
Metal Flybar (2)



**CNE305**  
Tail Drive Shaft Gears



**CNE306**  
Seesaw Assembly



**CNE307**  
3D Pro Head links



**CNE308**  
Rear Rudder Servo Mounts



**CNE309**  
Mast Tower



**CNE310**  
Frame Holders



**CNE311**  
Bottom Frame Plate



**CNE312**  
Top Motor Plate



**CNE313**  
Main Shaft, Spacers & Collar



**CNE314**  
3D Pro Swashplate



**CNE315**  
Tail Drive Shaft Set



**CNE316**  
Tail boom, Pushrod & Guides



**CNE317**  
3D Fins & Boom Supports



**CNE318**  
Tail Rotor Shaft Assembly



**CNE319**  
Inner tail Crown Gear



**CNE320**  
Battery Holders



**CNE321**  
Tail Pitch Lever & Slider



**CNE322**  
Tail Rotor Blades




**CNE323**  
Main Rotor Blades



**CNE324**  
Tail Blade Grip Set  
with Bearings



**CNE325**  
Tail Gear Box Set

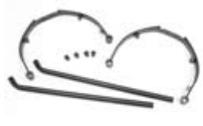

**CNE326**  
Landing Gear Set



**CNE327**  
Canopy & Decal



**CNE252**  
Lightning Brushless  
Main Motor



**PHX-10**  
Castle Creations Brushless  
Speed Control

## Optional Items



**CNE258**  
Machined Metal Main Rotor  
Blade Grips (adjustable)



**CNE259**  
Machined Metal  
Swashplate



**CNE327C**  
Clear Canopy & Decal



**CNE361**  
Brushless Motor Heatsink